Patio Cover Isometric

- (2) 12' 4x10's to Span 24'

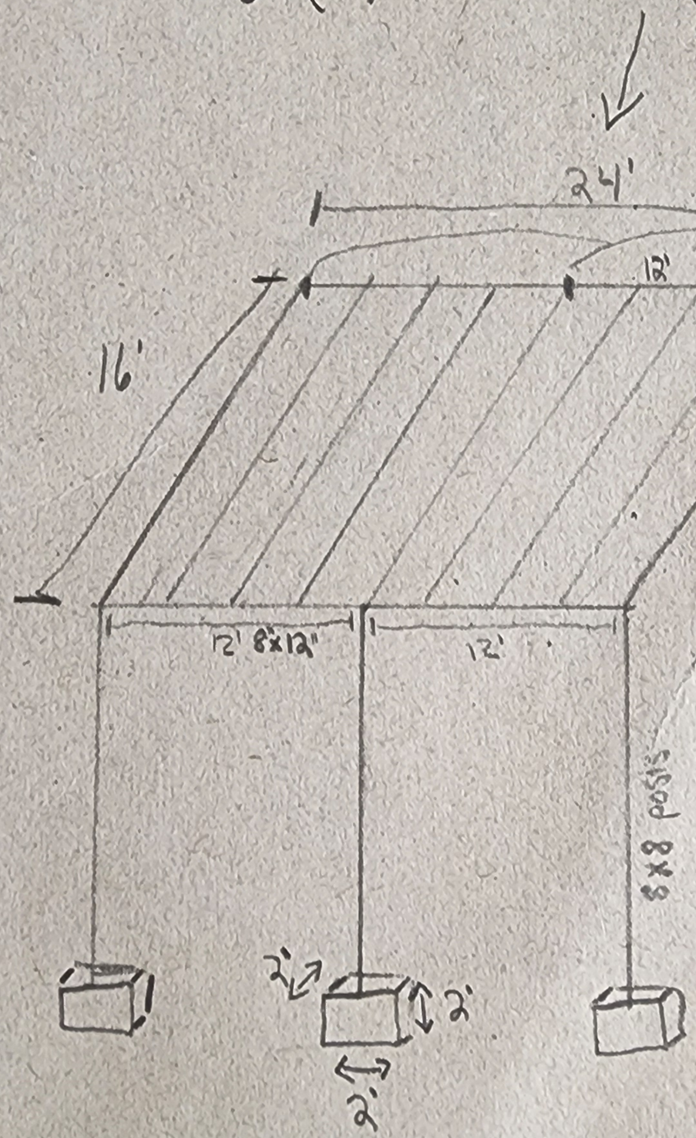

- Blown up version of my roof jacks

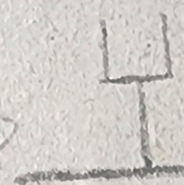

To secure the 12"x3" rafters:

10" SDW Lag's From top

8" Truss Screw's From bottom

- To Secure the 8"x12" beams to the 8"x8" posts will use lags from the top & "T" brackets to the post.

- 8x8 posts are sitting on 2'x2'x2' Concrete footings secured by 1/4" 8x8 Steel brackets